


NO. 0854 **CORE soft shell jacket**



Description (measured in cm)	S	M	L	XL	2XL	3XL	4XL	5XL	6XL
A: ½ Chest width	52	55	58	61	64	67	71	75	79
E: Front length from high point shoulder	71	73	75	77	79	81	83	85	87
H: Shoulder to shoulder	45	46.5	48	49.5	51	52.5	54.5	56.5	58.5
K: Sleeve length - long	68	69	70	71	72	73	74	75	76
L: ½ upper arm width	20	21	22	23	24	25	26.25	27.5	28.75

How to measure

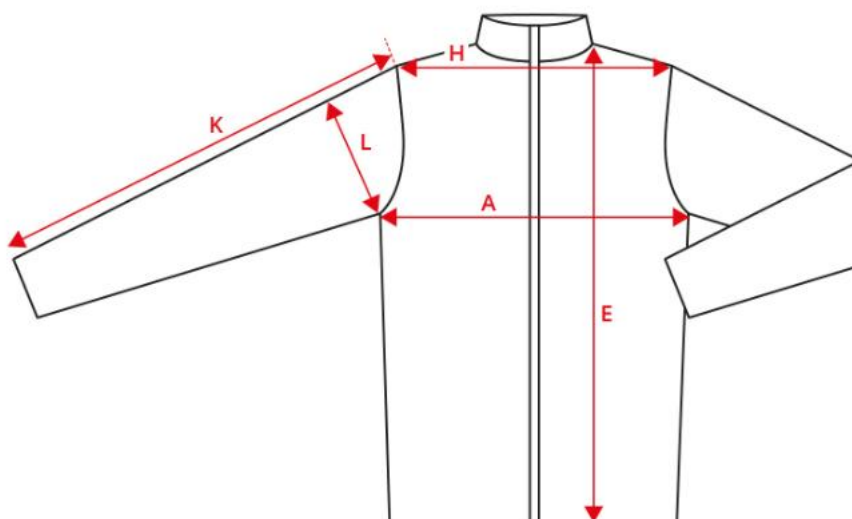

Tolerance in cm

A	E	H	K	L
1.5	1.5	1.5	1.5	1

The measurements in a product measurement chart refer to measurements made directly on the clothing.

Lay the garment out flat on an even surface without stretching it. Take the measurements as shown by the arrows and select the size that fits.

Use a tape measure for the best results. The tolerances in the measurement chart are based on when the item is received from ID® and not after washing. We reserve the right to make mistakes and omissions in the chart. You are always welcome to contact us for further guidance on using our product measurement chart at support@id.dk or tel: +45 97492144