
## NO. 0856 CORE soft shell jacket | women

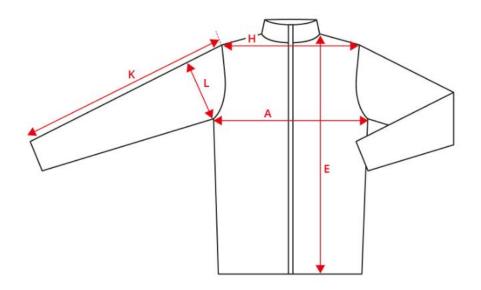

| Description (measured in cm)             | S    | М    | L    | XL   | 2XL  | 3XL  |
|--|------|------|------|------|------|------|
| A: ½ Chest width                         | 48   | 51   | 54   | 57   | 60   | 63   |
| E: Front length from high point shoulder | 65   | 67   | 69   | 71   | 73   | 75   |
| H: Shoulder to shoulder                  | 39.5 | 41   | 42.5 | 44   | 45.5 | 47   |
| K: Sleeve length - long                  | 63   | 64   | 65   | 66   | 67   | 68   |
| L: ½ upper arm width                     | 18.5 | 19.5 | 20.5 | 21.5 | 22.5 | 23.5 |

## How to measure



## Tolerance in cm

| Α   | E   | Н   | K   | L |  |
|-----|-----|-----|-----|---|--|
| 1.5 | 1.5 | 1.5 | 1.5 | 1 |  |